


Tactic Vans Awning Support:

Instructions for: Thule, Fiamma and Dometic.

WARNING:DO NOT STICK THE MAGNETS TOGETHER
they will be extremely difficult to separate.

- 1) Clean the vehicle surface before apply the magnets. Ensure there's no dust or sand that could scratch the paint.
- 2) To insert the "feet" of the awning into the plastic support, tilt the upper bracket of the support (the one with the embedded logo)
- 3) Insert the feet of the awning
- 4) Close the upper bracket, so that in case of mild wind the legs wont move

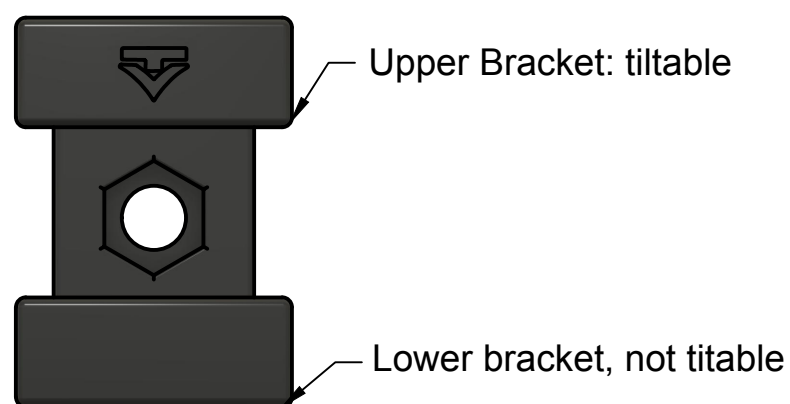

In case you are a true rebel who respects no authority except his mother, **please DO NOT USE anything sharp to try separate the magnets!**

- 1) Unscrew the plastic supports from the magnets, an take two wrenches, put the circles of the wrenches around the thread of the magnets and "close" with the nuts, then apply force as in the image below.
- 2) Make sure you use your thumbs to keep the magnets from rotating while you detach them.

